

IP CONTROL CONFIGURATION

1/ DOWNLOAD AND INSTALL LANTRONIX DEVICE INSTALLER:


To configure correctly your IP control box, please download and install the DeviceInstaller program that you can found at this address:

http://ltxfaq.custhelp.com/app/answers/detail/a_id/644?_ga=1.23462264.390870536.1469103786


Connect the OUTPUT of the IP control box to the I/O port of your AGATH TV and the INPUT of the IP control box to the local network.

2/ CONFIGURATE THE IP ADDRESS OF YOUR AGATH TV:

- First open Lantronix DeviceInstaller. You can see a window similar at the picture below:

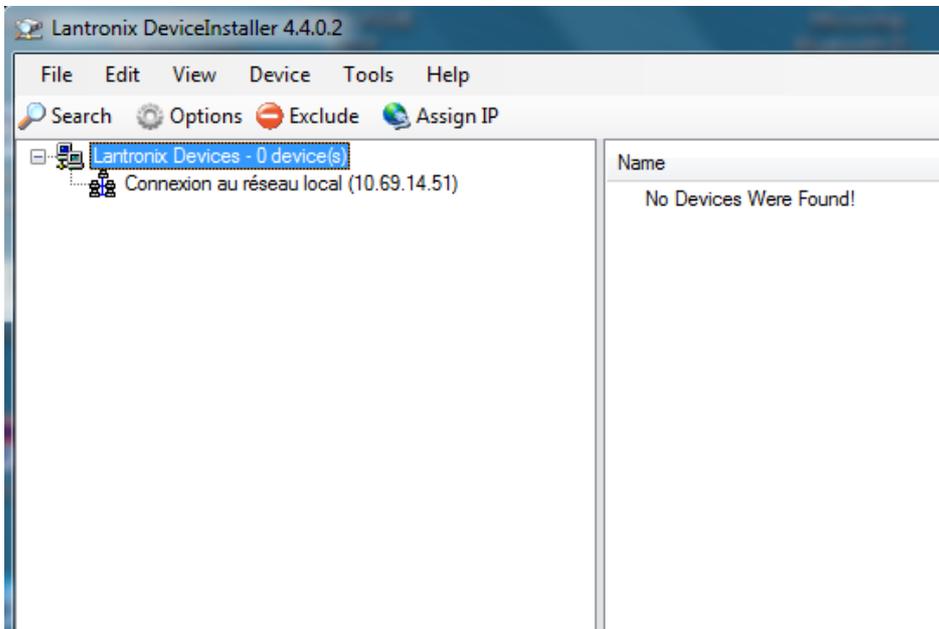


- Second, click on the shortcut "Search" to found the AGATH IP control box on the local network:

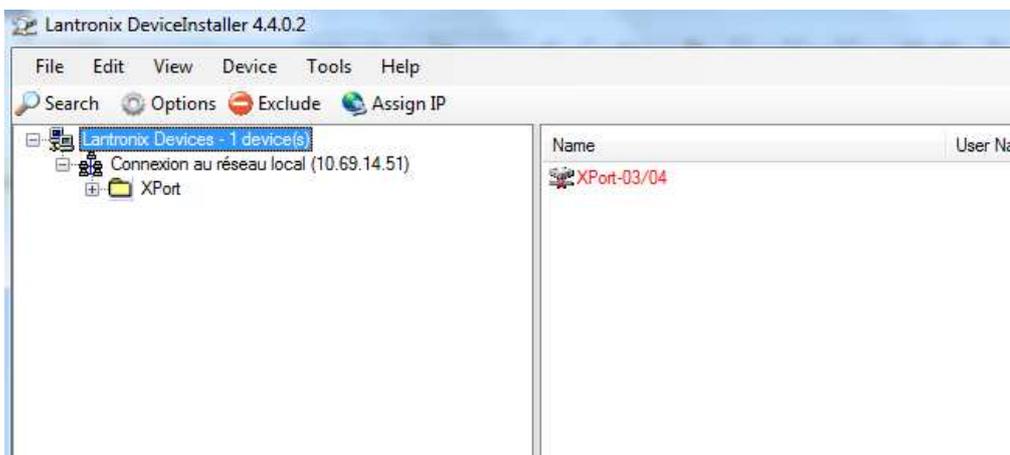


IP CONTROL CONFIGURATION


- Third, unroll the tree at the left of the window, select your AGATH IP control box and click on the shortcut "Assign IP":

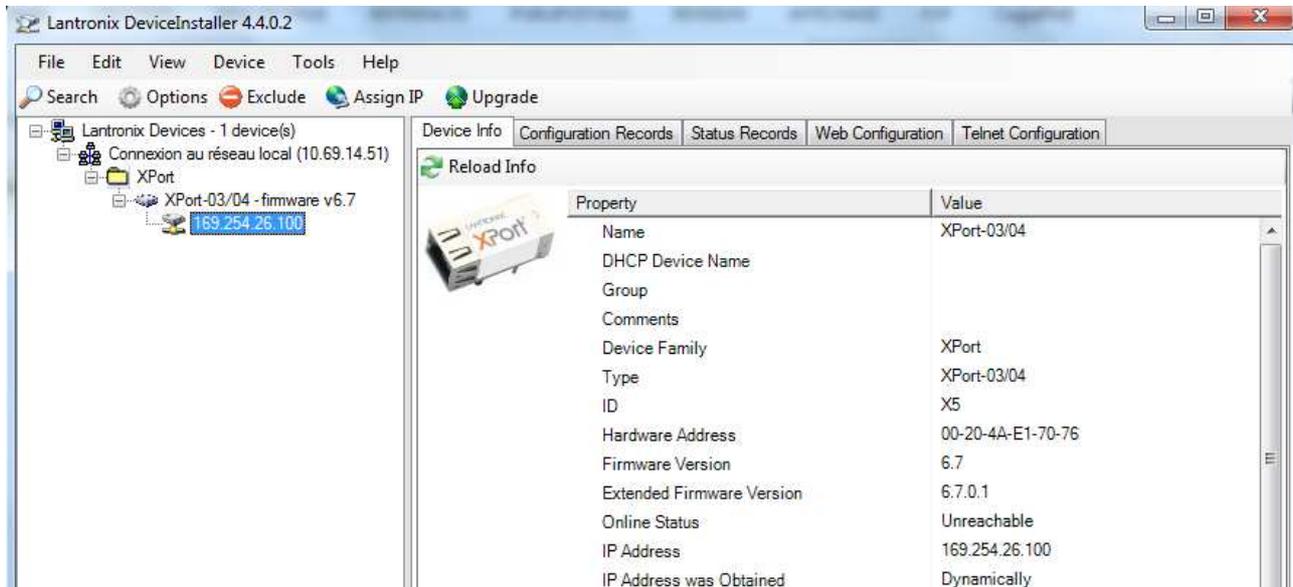

- On the new window, select "Assign a specific IP address" and click "NEXT":

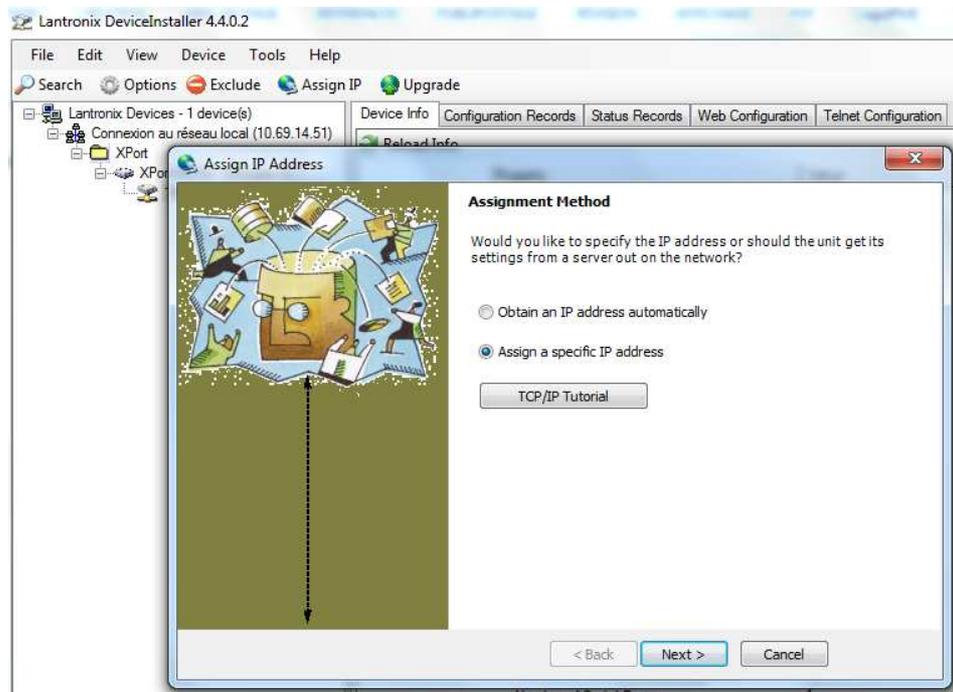

- Modify the IP address, click "NEXT" and "ASSIGN" :

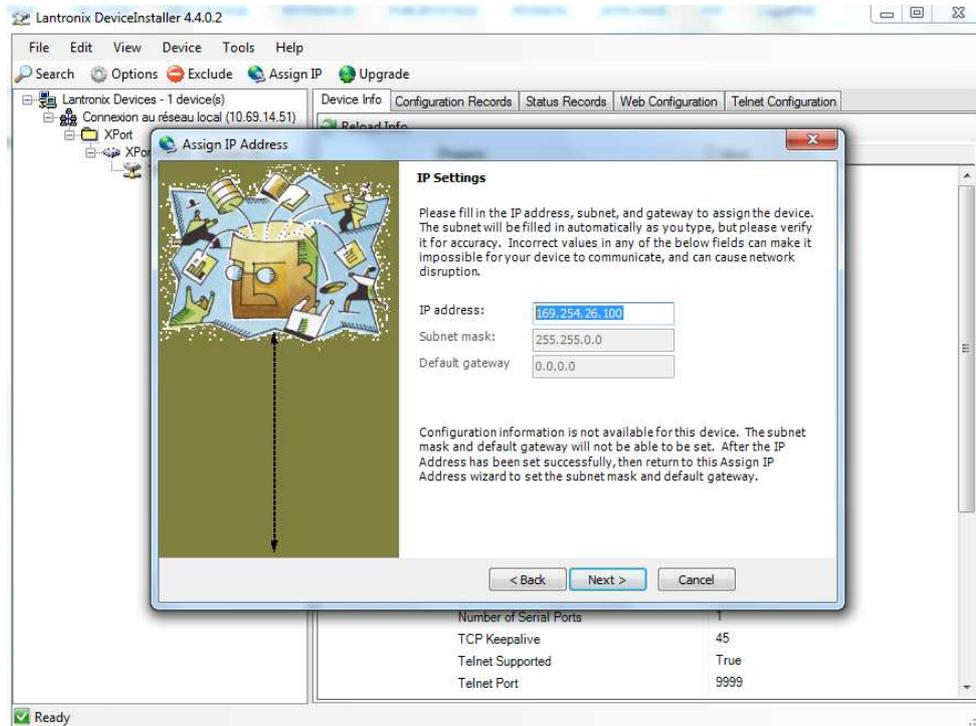

When the assignment is finished, click on "Finish" button and the AGATH IP control box is configured.

Don't forget the TELNET PORT is by default: 10001

The AGATH IP control box work only when it's connect to an I/O port of an AGATH TV.